



Ultra Spectrum License Activation Instructions

*Date:*03.14.2013

Solution: Ultra Spectrum is a software package that enables remote control and data collection from Rigol DSA spectrum analyzers.

It is available for trial.


After the trial period has expired, you can purchase an activation license by contacting your local Rigol sales office.

Here are instructions for activating your license:


- 1) Download and install UltraSigma software (see Ultra Sigma instructions for more information)
- 2) Download and install Ultra Spectrum
- 3) Power on and connect your DSA via USB or Ethernet to the controlling PC
- 4) Run UltraSigma. This should bring up a screen as below.. with your DSA information.



5) Right-click on the resource, and select UltraSpectrum

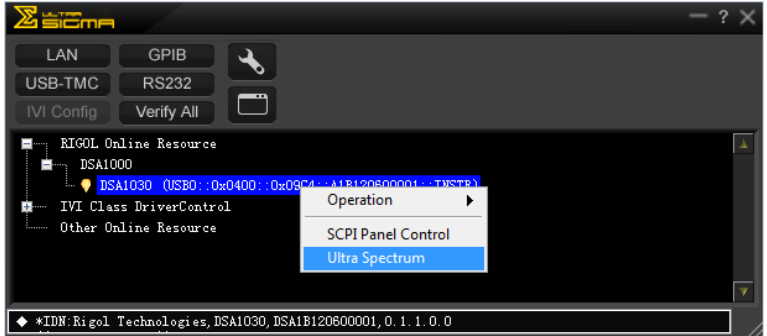


6) You will get a prompt telling how many days left on your trial. Click Activate

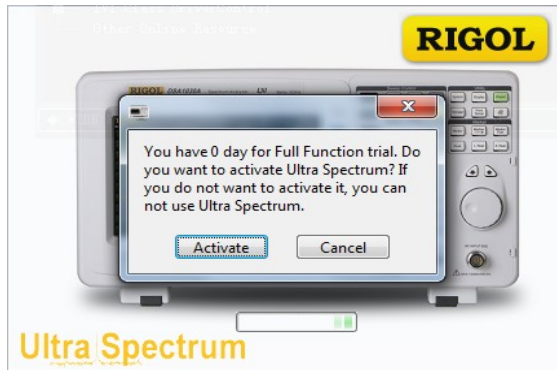

7) Enter the license code (Reg Code) and click OK

NOTE: License codes are linked to the instrument serial number.

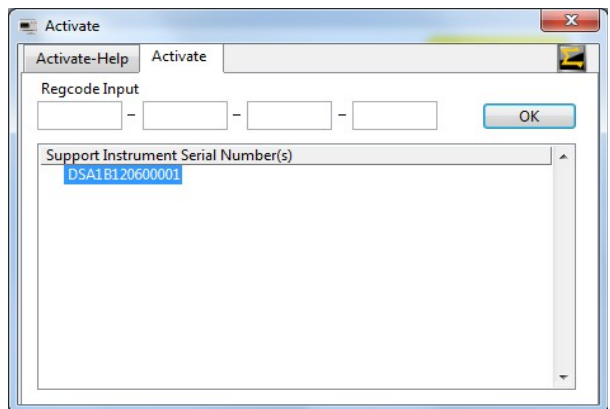



Headquarters

RIGOL TECHNOLOGIES, INC.
No.156,Cai He Village,
Sha He Town,
Chang Ping District, Beijing,
102206 P.R.China
Tel:+86-10-80706688
Fax:+86-10-80705070
Email: support@rigol.com

USA

RIGOL TECHNOLOGIES,USA INC.
7401 First Place, Suite N
Oakwood Village
OH 44164, USA
Toll free: 877-4-RIGOL-1
Office: (440) 232-4488
Fax: (216)-754-8107
Email: info@rigol.com

EUROPE

RIGOL TECHNOLOGIES GmbH
Lindbergh str. 4
82178 Puchheim
Germany
Tel: 0049- 89/89418950
Email: info-europe@rigoltech.com