


## Activating a license key remotely for the DSA800 and DSA1000 series Spectrum Analyzers

The DSA800 and DSA1000 series of spectrum analyzers feature a number of optional measurement features that can be purchased separately. The licenses are activated by entering a license key.


The license key can be entered manually or using a remote computer interface.

This note describes how to activate the license using the SCPI command Rigol UltraSigma software

- 1) Obtain the license key from your Rigol representative
- 2) Download UltraSigma software. You can find UltraSigma on the Software Tab of any DSA product page on [www.rigolna.com](http://www.rigolna.com).
- 3) Power ON the DSA and connect it to the controlling computer using USB or LAN
- 4) Open UltraSigma and right-click on the SCPI Panel Control as shown below

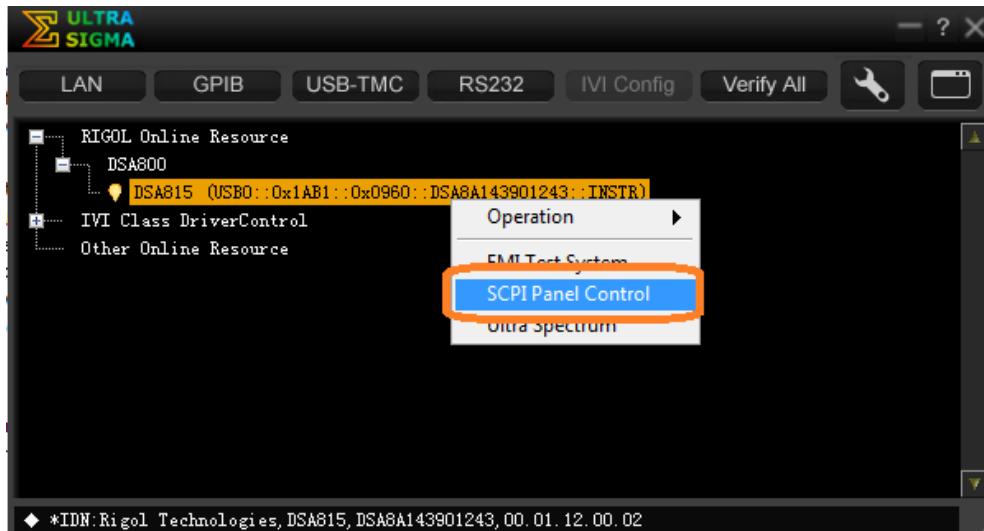

- 5) This will open up a single line dialog box where you can enter commands.
- 6) Type “:SYSTEM:LKEY <license key>”, Where <license key> is the license key value for the option that you wish to activate. You can copy and paste the license information from the text file generated by the license generation webpage or by hand.
- 7) Press Send after entering the string

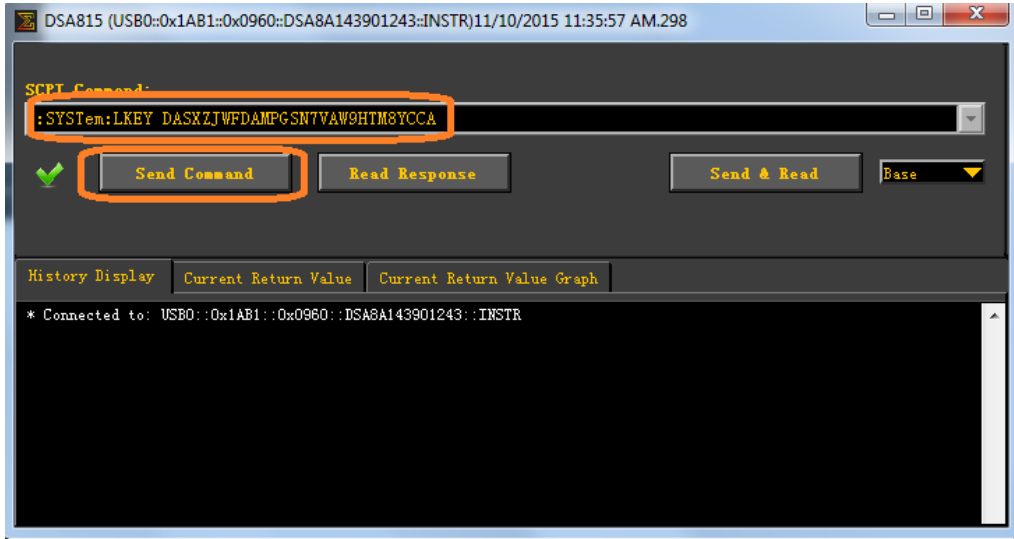

8) You can check the options on the instrument by pressing System > Down Arrow > License > License Info



Find more information online [DSA800 Family Information page](#)

For more information on our waveform generators or other products please go to [rigolna.com](http://rigolna.com) or contact us directly at [applications@rigoltech.com](mailto:applications@rigoltech.com) or call us toll free at 877-4-RIGOL-1.

## Rigol Technologies USA

10200 SW Allen Blvd, Suite C  
 Beaverton, OR 97005  
 877.474.4651